



MEDER BasicGuide mini

QUICK-START

1 Switch on

Press the  switch.


If no speech is made for 5 minutes, MicSens flashes on the display. After a further 25 minutes, the transmitter switches off automatically.

2 Select channel

Use the channel buttons to select the desired transmission channel.

If several transmitters are in use at the same time, if possible keep at least 1 channel - ideally 2 channels - between the channels in use.

3 Remote channel setting


You transmit the selected channel to the receiver devices by pressing the  button while the transmitter is pointing towards the front of the receiver.

A distance of 1 meter must not be exceeded. If the transmission was successful, the diode lights up red three times quickly.

4 Microphone



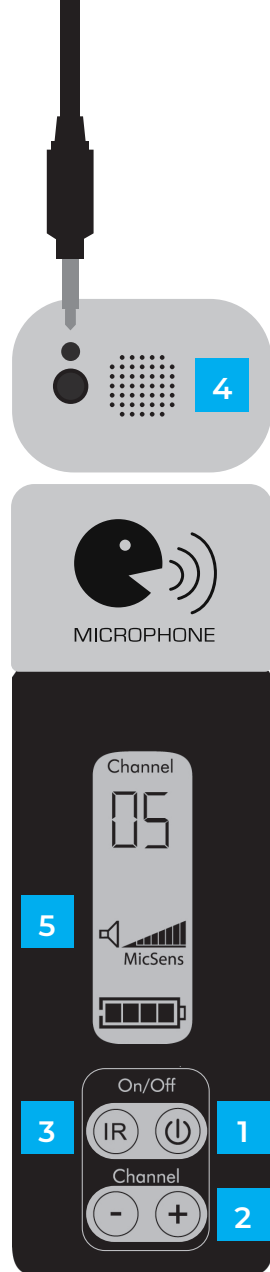


The built-in microphone is located on the top of the device.


An external microphone can be via the jack socket connect.




5 Programming menu

The transmitter has a menu in which two submenus can be used to set the **microphone sensitivity (P1)** and the so-called **noise gate (P2)**.


To access the programming menu, press the  and  buttons simultaneously for 1 second. P1" appears on the display. Use the  button to scroll through the submenus one after the other. Channel  increases / activates and  decreases / deactivates the respective setting.

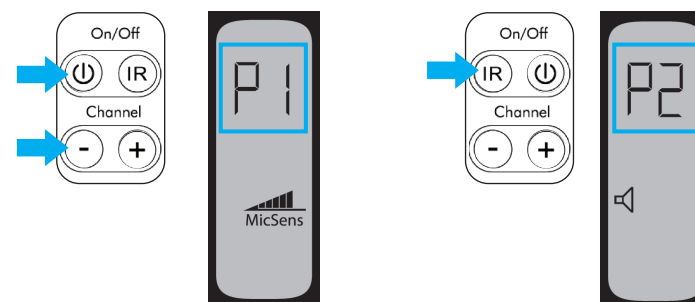


The correct **microphone sensitivity** ensures ideal sound quality for the receiver.

The sensitivity adjustment is active when the  symbol is shown on the display is shown.

The **Noisegate** function ensures that unwanted background noise is not transmitted when the guide is not speaking.

It can be activated or deactivated when the  symbol flashes on the display.

To apply the changed functions, switch off the the device by pressing the  button. As soon as the device is switched on again, the changes will take effect.

1 Switch on

Insert the headphone plug into the socket provided. If the connection was successful, the diode lights up red three times quickly.

2 Adjust volume


Use the volume buttons to adjust the volume.

3 Battery status

If the diode on the top of the top of the device is permanently red, the battery will last about two hours.

4 Switch off

Pull the headphone plug out of the device.

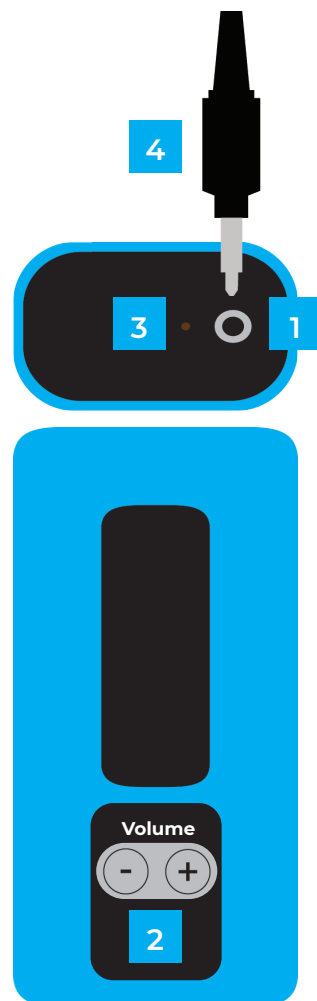

Get free advice on our accessories for the **BasicGuide mini**. Call our Service Center or find out more on our homepage:

www.meder-guiding.de

Non-contractual illustrations.

Subject to change without notice.

The complete operating instructions and the Quick Start Manual for the **BasicGuide mini** are available at the following Internet address:

www.meder-guiding.de/service/downloads/



Imprint

MEDER CommTech GmbH
Robert-Bosch-Str. 4
78224 Singen, Germany
Tel: +49 (0)7731 911 322 0
Fax: +49 (0)7731 911 322 99
info@meder-commtech.com
www.meder-guiding.de