



# MEDER BasicGuide

QUICK-START

## 1 Switch on

Push the  switch.


*If no speech is made for 5 minutes, MicSens flashes on the display. After a further 25 minutes, the transmitter switches off automatically.*

## 2 Select channel

Use the channel buttons to select the desired transmission channel.

*If several transmitters are in use at the same time, if possible keep at least 1 channel - ideally 2 channels - between the channels in use.*

## 3 Remote channel setting

You transmit the selected channel to the receiver devices by pressing the  button while the transmitter is pointing towards the front of the receiver.

*A distance of 1 meter must not be exceeded. If the transmission was successful, the diode lights up red three times quickly.*

## 4 Microphone






The built-in microphone is located on the top of the device.


*An external microphone can be via the jack socket can be connected.*



## 5 Programming menu


The transmitter has a menu in which two submenus can be used to set the **microphone sensitivity (P1)** and the so-called **noise gate (P2)**.

*To access the programming menu, press the  and  button simultaneously for 1 second. P1" appears on the display. Use the  button to scroll through the submenus one after the other. Channel  increases / activates and  decreases / deactivates the respective setting.*

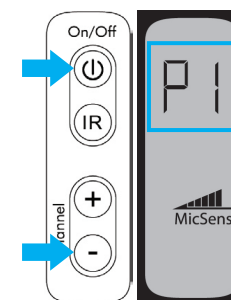



The correct **microphone sensitivity** ensures ideal sound quality for the receiver.

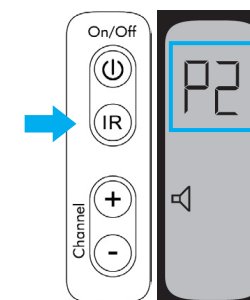The sensitivity adjustment is active when the  symbol is shown on the display.




The **noise gate** function ensures that unwanted background noises are not transmitted when the guide is not speaking.

It can be activated or deactivated when the  symbol flashes on the display.

*To apply the changed functions, switch off the device by pressing the  button. As soon as the device is switched on again, the changes take effect.*

# 1 Switch on

Insert the headphone plug into the socket provided. If the connection was successful, the diode lights up red three times quickly.

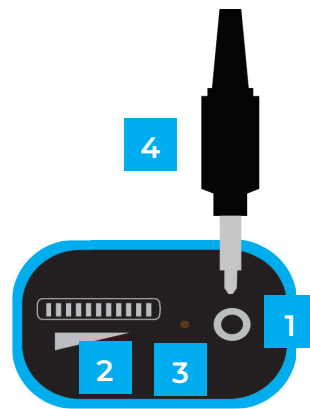

# 2 Adjust volume


Use the volume buttons to adjust the volume.

# 3 Battery status

If the diode on the top of the top of the device is permanently red, the battery will last for approx. two hours.

# 4 Switch off

Pull the headphone plug out of the device.

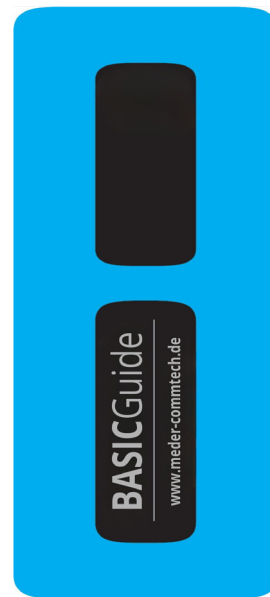

Get free advice on our accessories for the **BasicGuide**. Call our Service Center or find out more on our homepage:

[www.meder-guiding.de](http://www.meder-guiding.de)

Non-contractual illustrations.

Subject to change without notice.

The complete operating instructions and the Quick Start Manual for the **BasicGuide** are available at the following Internet address:

[www.meder-guiding.de/service/downloads/](http://www.meder-guiding.de/service/downloads/)



## Imprint

**MEDER** CommTech GmbH

Robert-Bosch-Str. 4

78224 Singen, Germany

Tel: +49 (0)7731 911 322 0

Fax: +49 (0)7731 911 322 99

[info@meder-commtech.com](mailto:info@meder-commtech.com)

[www.meder-guiding.de](http://www.meder-guiding.de)