



 
MEDER MediaGuide

QUICK-START

1 Turn on / Turn off

Press the A button.

If there is no speech for 5 minutes, MicSens flashes on the display. After another 25 minutes, the transmitter switches off automatically.

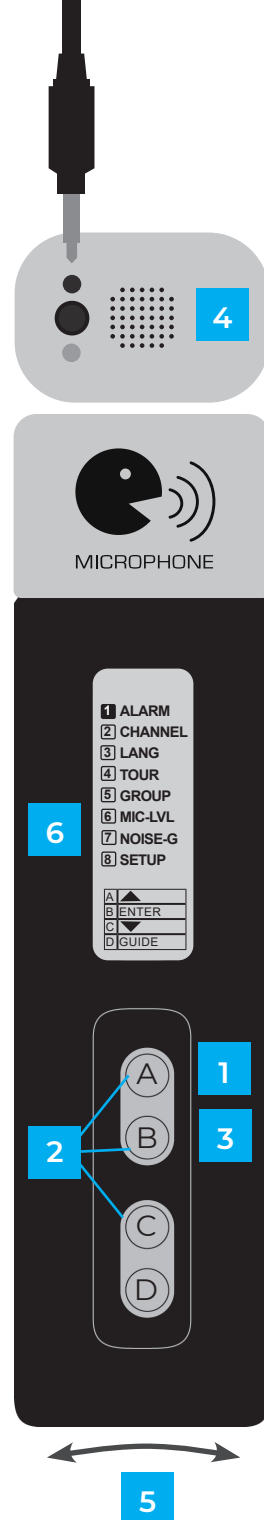

2 Choose channel

Use the A or C button to navigate and the B button to select the Channel menu, then select the desired channel.

If multiple transmitters are in use simultaneously, please maintain a distance of at least 1 channel—ideally 2 channels—between the channels being used, if possible.

3 Channel distance setting

You transfer the selected channel to the receiver devices by pressing the B button while pointing the transmitter toward the front of the receiver.

A distance of 1 meter must not be exceeded.

4 Microphone

The built-in microphone is located on the top of the device.

An external microphone can be connected via the audio jack.


5 Play ⇌ Talk toggle function

Press D to switch to Guide mode. If the transmitter is tilted 90° to the right (Speak) or left (Play) and confirmed with B, it automatically switches to Play ⇌ Talk.

6 Programming menu


The transmitter has a menu in which various settings can be adjusted—in addition to the channel settings, **the language (3), microphone sensitivity (6), and the so-called noise gate (7)** can also be adjusted.

To navigate the programming menu, press the A or C button to move up or down and the B button to select the corresponding menu or setting.

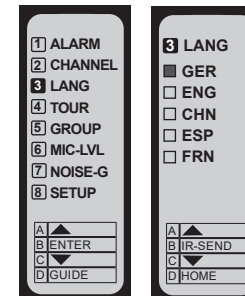


Select the desired **language** in the “LANG” menu using the A and C buttons. Synchronize the setting with the receiver devices via infrared using the B button.

Use the D button to exit the submenu and save the settings with the A button.

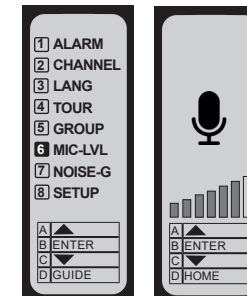

Use the A and C buttons to select the desired **microphone sensitivity** in the “MIC-LVL” menu.


Press the D button to exit the submenu.

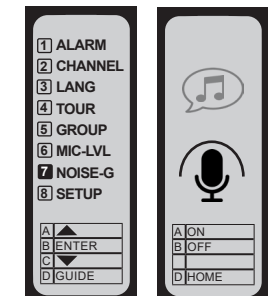

Use buttons A and B to activate or deactivate the **noise gate function** in the “NOISE-LVL” menu.

Press button D to exit the submenu.

Select tour

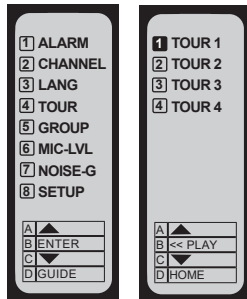

Press the D "GUIDE" button in the menu to access the tours submenu. Here you can navigate using the A and C buttons and start the audio file using the B button. Pressing the B button again pauses the audio and also plays it again.


You can switch between "SPEAK" and "PLAY" using the toggle function explained in point 5.

RECEIVER

1 Turn On / Turn Off
The device activates and deactivates automatically by motion.

2 Join tour
The display shows "Press any key."
Press any key.

3 Adjust volume
Use the volume buttons + for louder and - for quieter to set the desired volume.

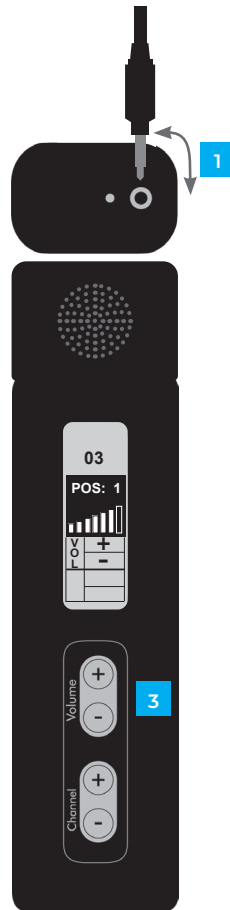

Get free advice on our accessories for the **MediaGuide**. Call our service center or find out more on our homepage:

www.meder-guiding.de

Non-contractual representations.

Subject to change without prior notice.

The complete user manual and the quick start guide for the **MediaGuide** are available at the following internet address:

<https://www.meder-guiding.de/service/downloads/>



Imprint

MEDER CommTech GmbH
Robert-Bosch-Str. 4
78224 Singen, Germany
Tel: +49 (0)7731 911 322 0
Fax: +49 (0)7731 911 322 99
info@meder-commtech.com
www.meder-guiding.de